



ID+

ID photo solution

Installation and Quick Start Guide

**Exclusively for DNP ID600 printer
and dedicated ID600 media**

Warning

Chapter 1

To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture.

To avoid electrical shock, do not open the ID+ Tablet and ID600 Printer covers. Refer servicing to qualified staff only.

THIS EQUIPMENT MUST BE EARTHED.

To disconnect the main power, unplug the AC IN connector.

Read before use

Review the user guide before using system. Go to <http://www.dnpphoto.eu/en/>

For each device contained in this system, see "Important Safety Instructions" in the corresponding user guides or start-up guides.

Use a proper power cord for your local power supply.

Tablet

1. Use the original Power Brick and Cord provided in the tablet box / Appliance Connector / Plug with earthing-contacts that conforms to the safety regulations of each country if applicable.

Printer

2. Use the Power Cord (3-core mains lead) / Appliance Connector / Plug conforming to the proper ratings (Voltage, Ampere).

EU compliance statements

This system is compliant with Class A of EN55032. This system is not intended for residential area. In a residential area this system may cause radio interference.



The symbol means that according to local laws and regulations your product and/or its battery shall be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. For details, contact to your dealer.

About ID+ Tablet

Do not attempt to replace the battery yourself – you may damage the battery, which could cause overheating, fire and injury. The lithium-ion battery in your device should be serviced or recycled by authorized service provider, and must be recycled or disposed of separately from household waste. Dispose of batteries according to your local environmental laws and guidelines. For details, contact to your dealer.

To prevent possible hearing damage, do not listen at high volume levels for long periods.

Hereby, PiPO TECHNOLOGY CO., LTD. declares that the radio equipment type PiPO W1 pro is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<http://www.dnpphoto.eu/en/support-and-downloads/declaration-conformity>

Frequency band in which the radio equipment operates: 2402-2480Hz (BLE), 2412-2472Hz (Wi-Fi).

Maximum radio-frequency power transmitted in the frequency band in which the radio equipment operates: - 3.1 dBm (BLE), 10.62 dBm (Wi-Fi).

The manufacturer of this product is PiPO TECHNOLOGY CO., LTD. Area C, 3F, Warehouse Building, Bao Yun Da Logistics Center, Xi Xiang Avenue, Bao an District, Shenzhen, China.



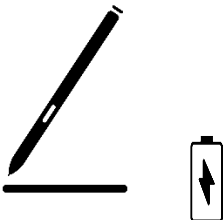
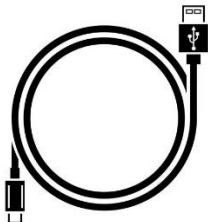
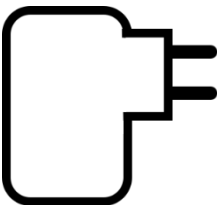
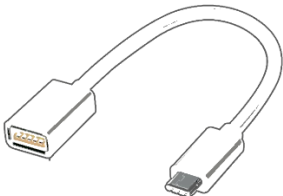
The importer for RE directive and RoHS is DNP PHOTO IMAGING EUROPE SAS, ZI PARIS NORD II, 22 AVENUE DES NATIONS, PARC SILIC –VILLEPINTE, 95948 ROISSY, CDG CEDEX, FRANCE.

Installation


Chapter 2

Box content

The box contents:

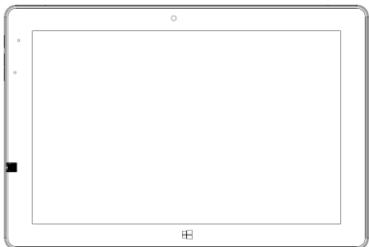		
ID+ Tablet	Keyboard	Digital pen + AAAA 1.5v battery
		
USB cable	AC adapter	OTG cable

Installation:

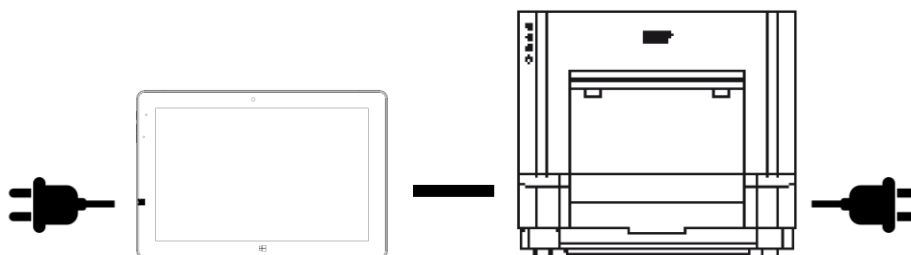

Make sure all power supply cables (Printer and Tablet) are connected. Now, please connect the tablet to the printer with the USB cable provided in the printer box.

Quick Start

Chapter 3




Note : Please note that the screen can be disconnected from the keyboard and used as a tablet.

Starting ID+ solution

- 1) Switch on the ID600 printer.
 - 2) Load ID600 media into the printer (please refer to ID600 Start-up Guide).
 - 3) Switch on the ID+ tablet (Switch ON button is on the top left side).
- ➔ After a few minutes the ID+ Software will automatically start running.



Note: If the ID600 Printer is not connected, the software will display a message informing that the printer is disconnected.

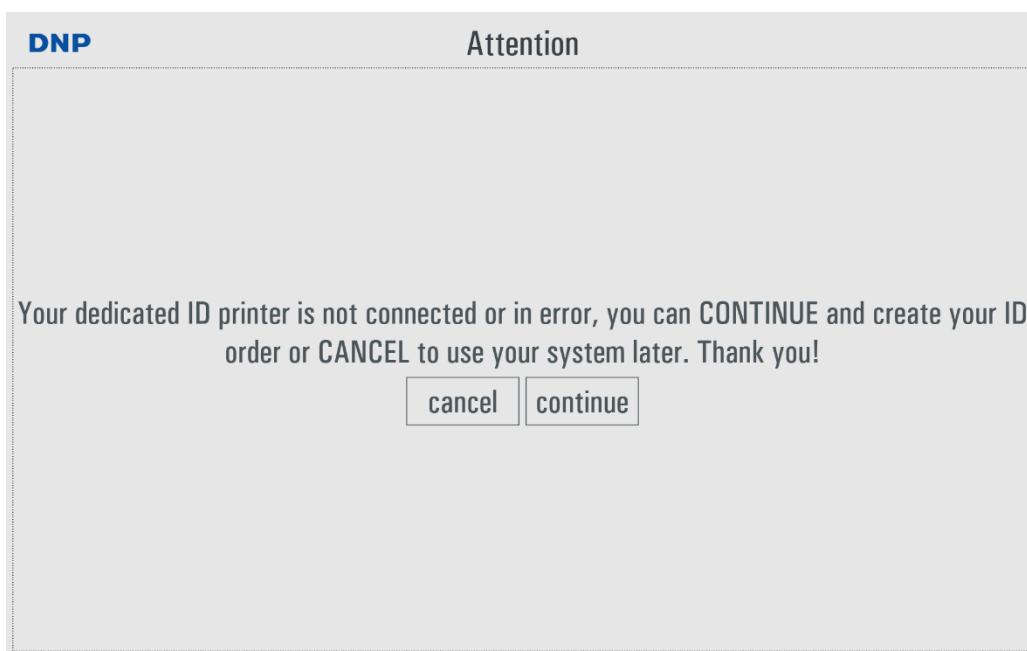


- ➔ You can still proceed the order (start the process until the Print Page). Your order will be saved automatically in "Pending orders".

When the printer is connected to the system, a green icon will appear automatically on the top right of the screen within a few seconds and indicate the remaining prints. Then, you can resume your order and print.


Make an ID photo order

This is the Workflow of creating and printing an ID photo.


1) Select *New ID*

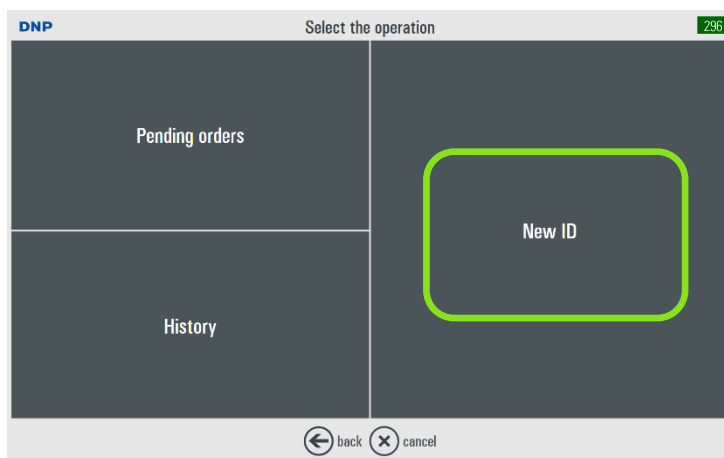


2) Select where images are located.

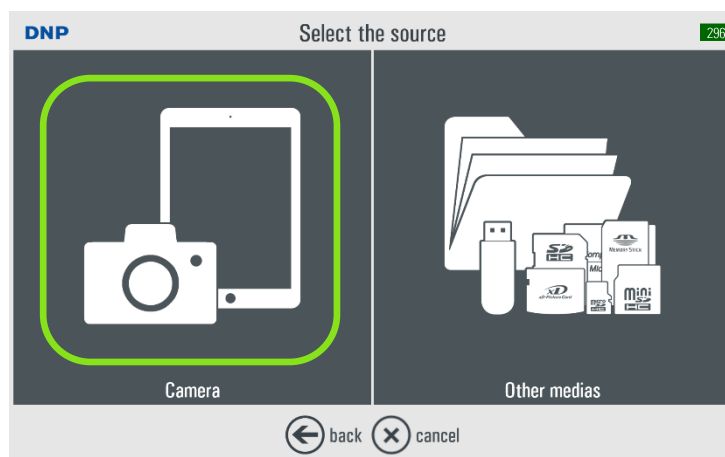


3) Select the source.

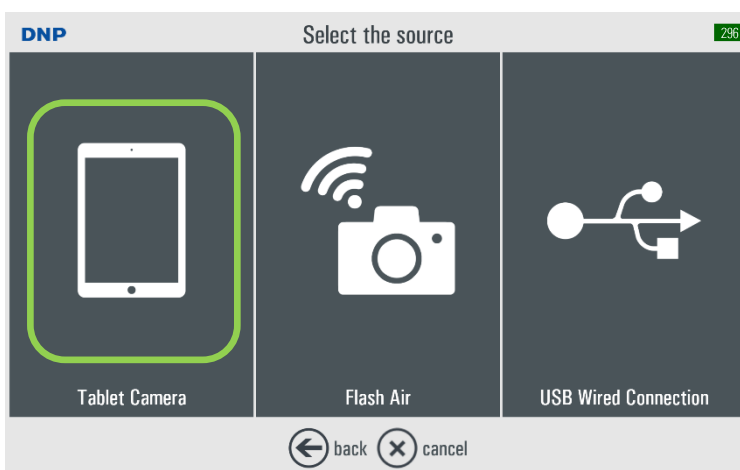


- 4) Take the photo and validate.

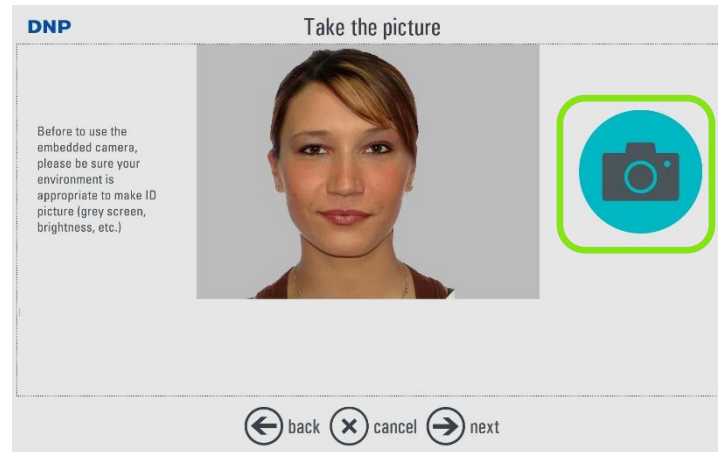


- 5) Choose the country and the type of document. Select *Biometric* for automatic process or *Manual* for manual editing.

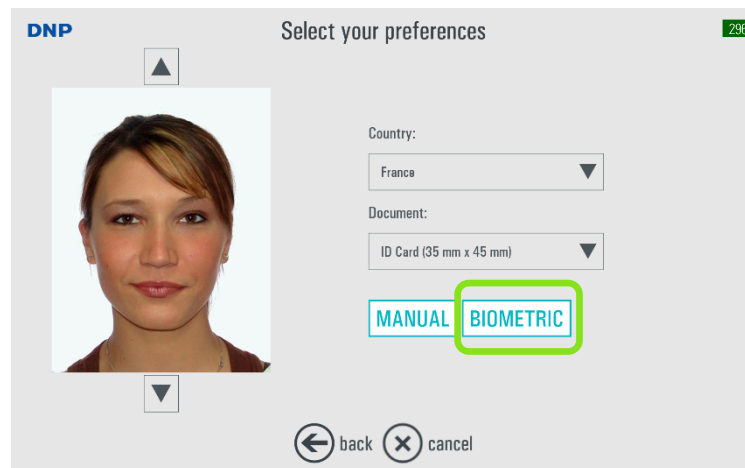

- 6) You get the biometric results. If necessary, you can edit manually the picture, by clicking on *edit photo*.

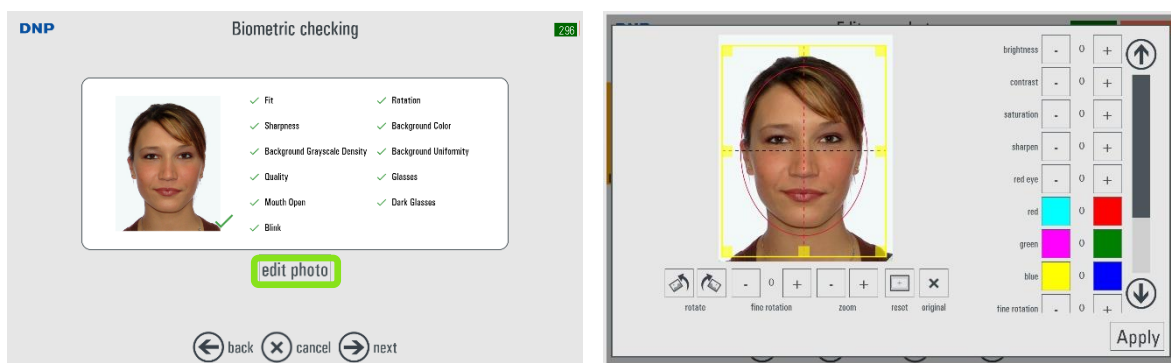

7) Select the options.

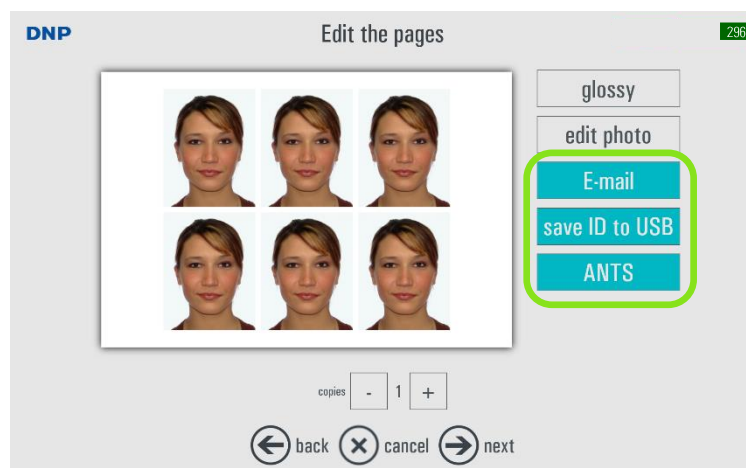



Note : Please note that the “send by email”, “save ID to USB” and “ANTS” are deactivated by default. You can activate these options via the admin settings.

ANTS option is only for France (process specific to French regulations).

8) Insert Customer name.



9) Press “finish” to finish the order.

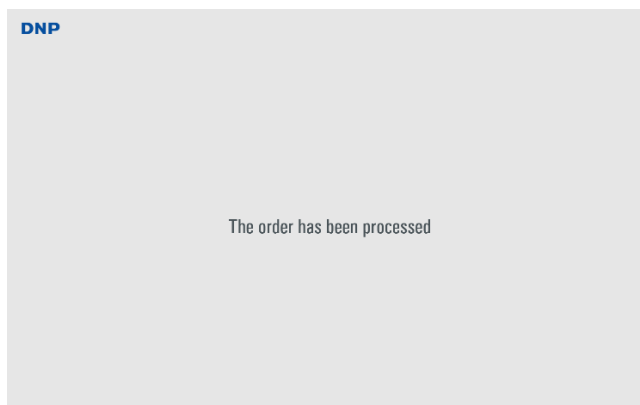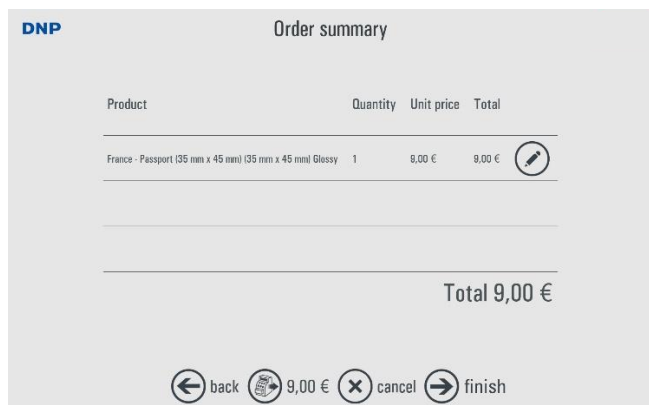


Shutdown the ID+ solution

- 1) Enter into Main Panel by touching in sequence the lower left and right corners of the monitor.



- 2) Click on **Computer shutdown** button

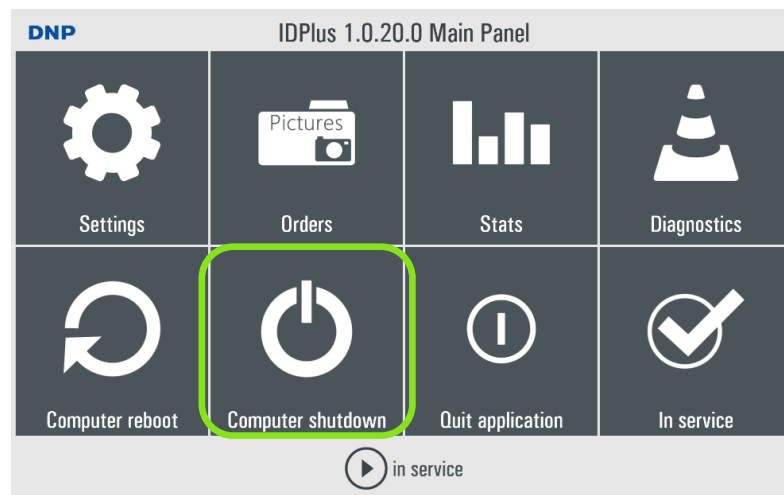

- 3) Wait until ID+ tablet automatically switches OFF
- 4) Switch off the ID600 printer.
- 5) Disconnect power cables.

Troubleshooting

Chapter 4

For any technical issue(s) and question(s), please contact DNP PIE support team at:

support@dnpphoto.eu

For more details, please visit www.dnpphoto.eu website
to download the ID+ solution User Manual.